


POWERBLOCK PRO COMMERCIAL STAND

ASSEMBLY STEP 1

ITEM NO.	DESCRIPTION	QTY.
1	PRO COMMERCIAL STAND LEG	2
2	PRO COMMERCIAL STAND SHELF	1
3	M10 - 1.5mm X 70mm HEX HEAD BOLT	4
4	M10 WASHER	8
5	M10 - 1.5mm LOCK NUT	4

TOOLS NEEDED: TWO 17mm WRENCHES.

1. ATTACH STAND SHELF (ITEM 2) TO ONE STAND LEG (ITEM 1) WITH SUPPLIED HARDWARE.
DO NOT TIGHTEN HARDWARE.
2. ATTACH OTHER STAND LEG (ITEM 1) TO STAND SHELF (ITEM 2) WITH SUPPLIED HARDWARE.
DO NOT TIGHTEN HARDWARE.

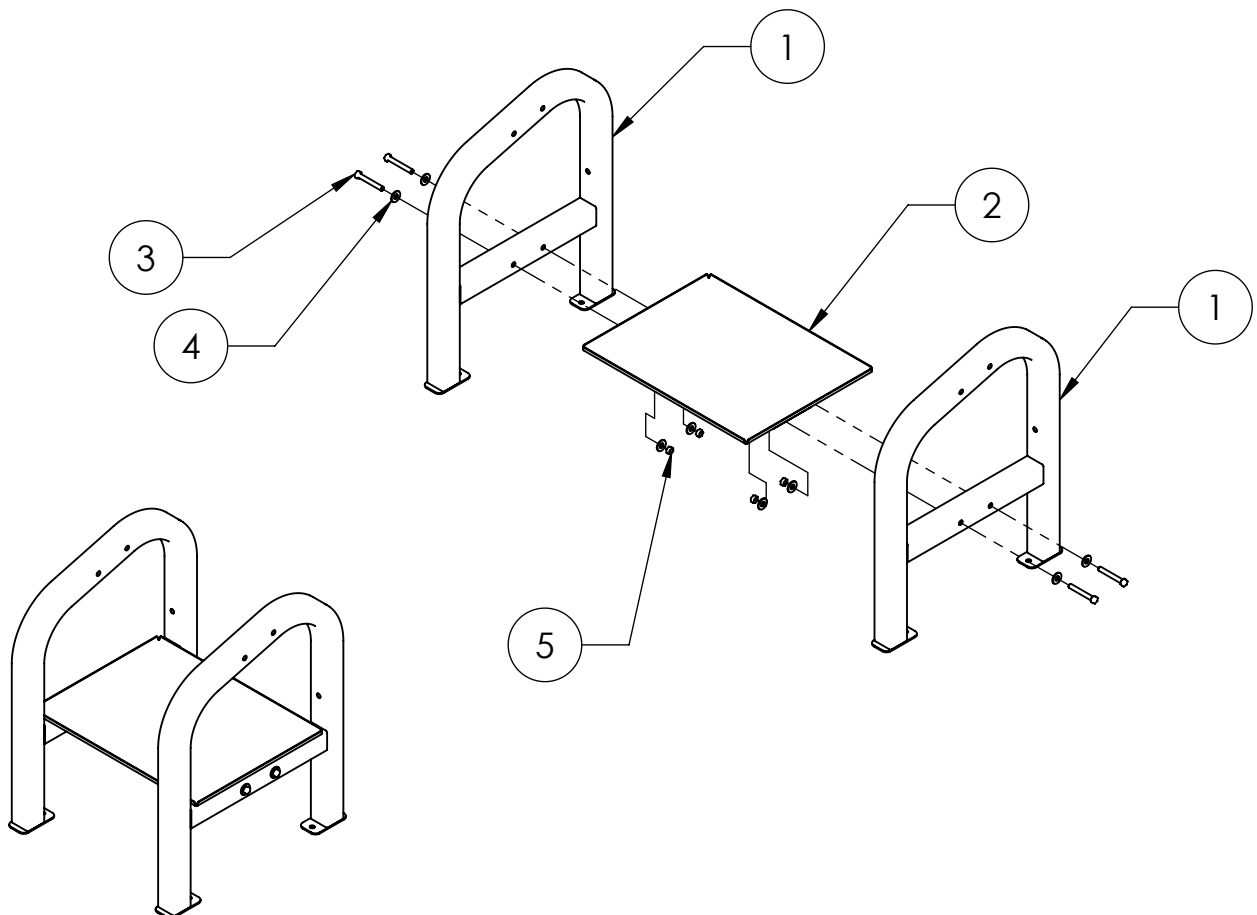

POWERBLOCK PRO COMMERCIAL STAND

ASSEMBLY STEP 2

ITEM NO.	DESCRIPTION	QTY.
1	PRO COMMERCIAL STAND LEG	2
2	PRO COMMERCIAL STAND TOP	1
3	M10 - 1.5mm X 70mm HEX HEAD BOLT	4
4	M10 WASHER	8
5	M10 - 1.5mm LOCK NUT	4

TOOLS NEEDED: TWO 17mm WRENCHES.

1. ATTACH STAND TOP (ITEM 2) TO ONE STAND LEG (ITEM 1) WITH SUPPLIED HARDWARE.
DO NOT TIGHTEN HARDWARE.
2. ATTACH OTHER STAND LEG (ITEM 1) TO STAND SHELF (ITEM 2) WITH SUPPLIED HARDWARE.
DO NOT TIGHTEN HARDWARE.
3. TIGHTEN ALL HARDWARE.

